



## Wiring precautions of the DMX Lighting fixtures

**TLADR/TLDADR/TL10ADR/TLD10ADR/TL20ADR  
SHL-DMX/SHL-TU-DMX**


ATEX Co., Ltd

# Point

**Connect the signal GND of the DMX data between send side and receive side.**

**<Note>** If you do not do this wiring, the LED may flicker.

- When using an additional power supply due to exceeding the maximum series connection length.

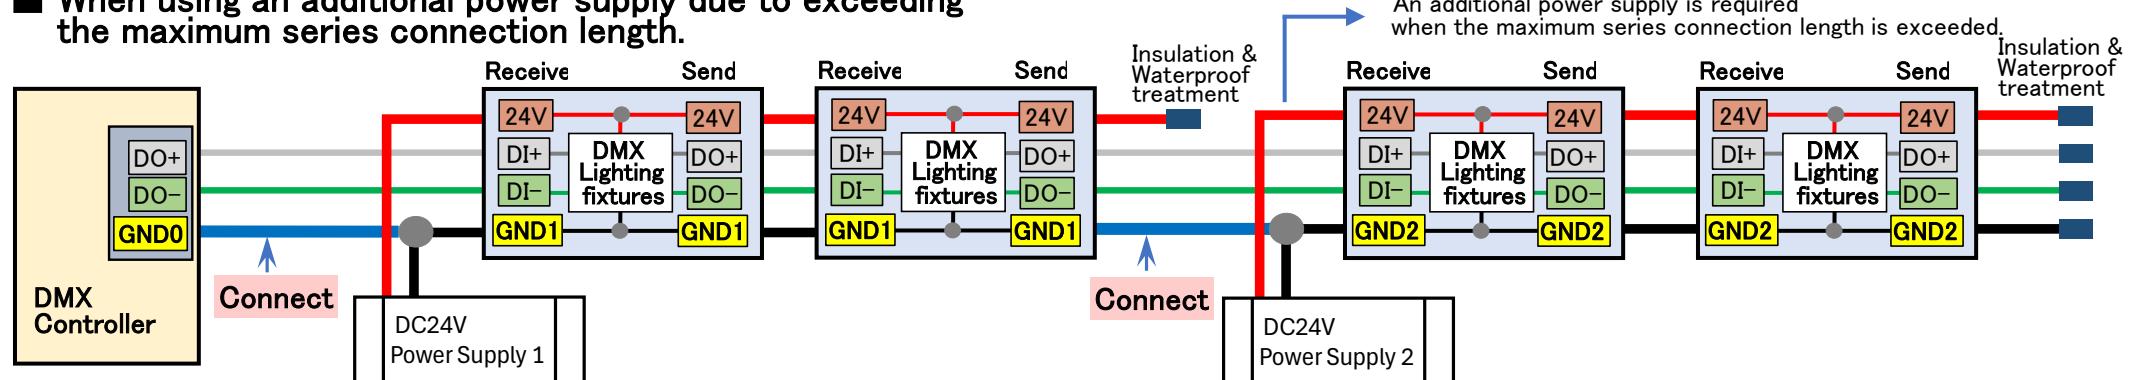

■ When using parallel connection within the maximum series connection length.

