



Wiring precautions of the DMX Lighting fixtures

TL-ADR / TLD-ADR / TL20-ADR
SHL-DMX / SHL-TU-DMX


ATEX Co., Ltd

Point

Connect the signal GND of the DMX data between send side and receive side.

<Note> If you do not do this wiring, the LED may flicker.

- When using an additional power supply due to exceeding the maximum series connection length.

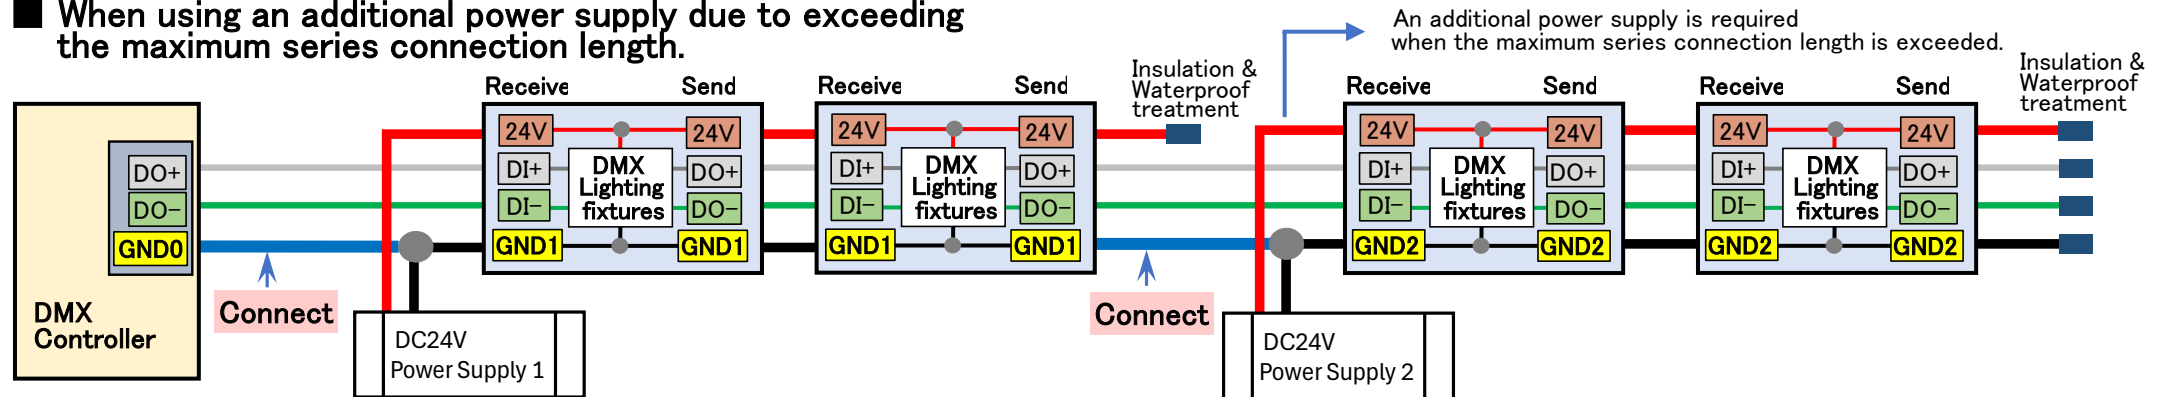

- When using parallel connection within the maximum series connection length.

