
 


Installation with the channel

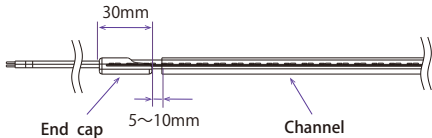


Cross section with channel



Installation with the bracket

Use the bracket every 180mm.

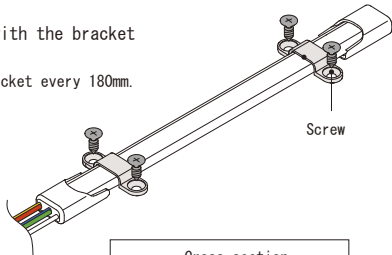

Cross section with bracket

